

Part Number: BMW-GS13-F(E) & BMW-GS13-R(E)

Description: Front and Rear Saddles

Fitment: 2024 BMW R 1300 GS

Revision: 2



Tools Required	Parts List
	1 SP02677 2-Wire Front Connector - Pre-installed 1 SP02681 4-Wire Rear Connector - Pre-installed

1. Remove the stock seat(s) from your bike and disconnect the wiring harness on the front and rear saddles (*Figures 1 & 2*). Refer to your owners manual if necessary.



2. Corbin's front and rear saddles mounts just like stock. Slide the front tab of your front saddle under the front seat mount at the rear of the gas tank, then lower the rear of the front seat down onto the chassis. For the rear saddle, slide the two front tongues under the front saddle, align the rear of the saddle to the locking mechanism and push down. To remove, use the stock key to unlock and pull up.

3. **Electric Heat Installation:** Connect the front BMW connectors to the pigtail (SP02677 2-Wire) on the Corbin front saddle (*Figure 3*) and then connect the rear BMW connectors to the pigtail (SP02677 4-Wire) on the Corbin rear saddle (*Figure 4*).

NOTE: The heater operates on the dash controls.

4. Proceed with saddle mounting as outlined above.

Enjoy your new saddle!

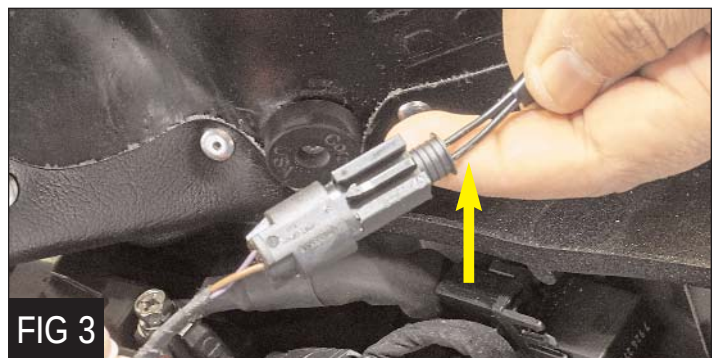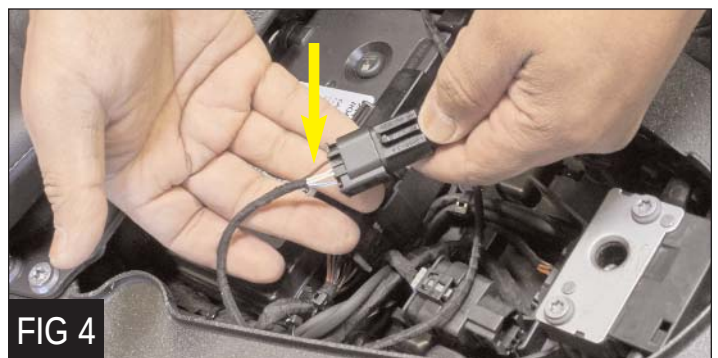

Questions? Give us a holler...
800-223-4332
tech@corbin.com