

Part Number: BMW-GS13-SM(E)

Description: Supermoto Saddle

Fitment: 2024 BMW R 1300 GS

Revision: 2

Corbin

Tools Required	Parts List
	SP02677 2-Wire Front Connector - Pre-installed

1. Remove the stock seat(s) from your bike and disconnect the wiring harness on the front saddle (*Figure 1*). Refer to your owners manual if necessary.

2. To install your Supermoto Saddle, simply slide the front tab of your saddle under the front seat mount at the rear of the gas tank, then lower the rear of the front seat down onto the chassis and push firmly on the passenger platform to latch (*Figure 2*).


NOTE: Make sure the front bumpers sit in the frame pockets.

3. Electric Heat Installation: Connect the front BMW connectors to the pigtail (SPO2677 2-Wire) on the Corbin saddle (*Figure 3*).

NOTE: The heater operates on the dash controls.

4. Proceed with saddle mounting as outlined above.

Enjoy your new saddle!

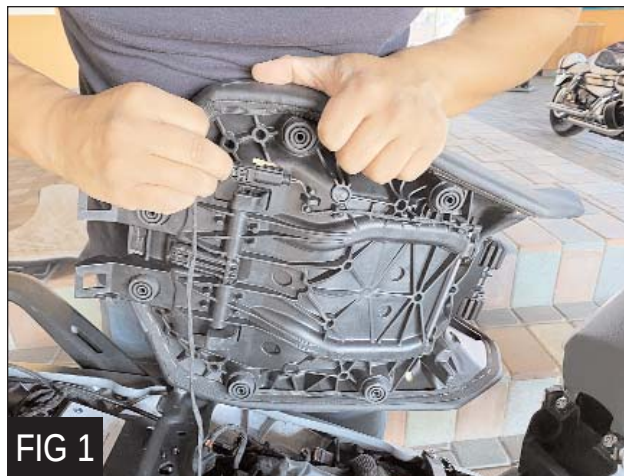

Questions? Give us a holler...
800-223-4332
tech@corbin.com